

LIONCAST

Charging Grip

for / für Nintendo Switch Joy-Cons





Charging Grip

für Nintendo Switch Joy-Cons

Gesundheits- und Sicherheitsinformationen

Bitte lies und beachte die folgenden Gesundheits- und Sicherheitsinformationen sorgfältig bevor das Gerät verwendet wird. Andernfalls kann dies zu Schäden oder Verletzungen führen. Verwendung des Produktes durch Kinder nur unter Aufsicht von Erwachsenen.

Warnung

Hinweise zur elektrischen Sicherheit

- Nur zur vorgesehenen Verwendung nutzen.
- Den Charging Grip nur im Trockenen verwenden.
- Der Charging Grip darf keinen Mikrowellen, hohen Temperaturen oder längerem und direktem Sonnenlicht ausgesetzt werden.
- Achte darauf, dass der Charging Grip nicht in Kontakt mit Flüssigkeiten kommt oder nass wird!
- Berühre den Charging Grip auf keinen Fall mit nassen oder fettigen Händen.
- Den Charging Grip nicht mit übermäßiger Kraft verwenden und die USB-C Verbindung nicht beschädigen
- Vermeide den USB-C Anschluss mit den Fingern, metallischen Gegenständen oder anderen Oberflächen zu berühren. Damit wird eine Verschmutzung der Anschlüsse vermieden. Die Reinigung mit einem trockenen Tuch ist vorteilhaft.
- Solltest du ungewöhnliche Geräusche, Gerüche oder Rauchentwicklung bemerken, oder sollte Flüssigkeit entweichen, dann stelle

den Gebrauch ein und kontaktiere unseren Service.

- Solltest du mit der Flüssigkeit in Berührung kommen, dann wische die Flüssigkeit direkt mit Wasser aus. Reinige die Oberfläche des Charging Grips mit einem Tuch ab.
- Der Charging Grip darf nicht zerlegt oder repariert werden. Sollte der Charging Grip beschädigt sein, dann stelle die Verwendung unverzüglich ein und kontaktiere unseren Service. Berühre keine beschädigten Bereiche.
- Verwende nur das beiliegende USB-C Kabel in Verbindung mit dem Charging Grip. Ziehe nicht am USB-C-Ladekabel und verbiege es nicht zu sehr.
- Den Charging Grip bei Gewitter nicht verwenden.

Warnung

Allgemeine Hinweise

Bewahre dieses Produkt und die Verpackungsmaterialien außerhalb der Reichweite von jüngeren Kindern auf. Verpackungsmaterialien und die einzelnen Geräte könnten verschluckt werden.

Vorsichtiger Gebrauch

Sollte der Charging Grip verschmutzt sein, wische es mit einem trockenen, weichen Tuch ab. Verwende keine Verdüner, kein Benzin und keinen Alkohol.

Funktionsabbildung




- 1 USB-C Anschluss
- 2 Ladeanzeige
- 3 Spieleranzeigen
- 4 Joy-Con-Anschlussschienen

Laden der Joy-Cons am Lioncast Charging Grip

Nach dem anschließen der Joy-Cons an den Charging Grip kann eine der beiden aufgeführten Optionen zum Lade der Joy-Cons ausgewählt werden.

- **Option 1:** Verbinde das mitgelieferte USB Typ-A Kabel wie in der Darstellung abgebildet.
- **Option 2:** Verbinde das mitgelieferte USB Typ-A Kabel direkt mit einem USB-Netzteil oder einer Power Bank.

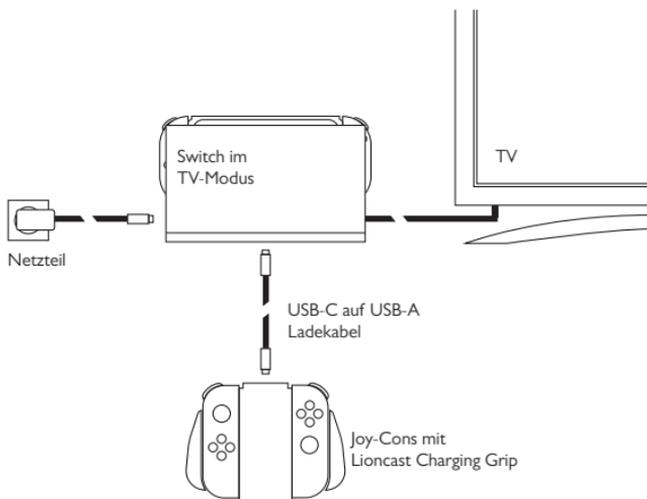

Technische Details

Eingang	5V / 450mA
---------	------------

Ausgang	5V / 200mA oder 5V / 400mA (2 Joy-Cons)
---------	--

Ladezeit	80 - 120 min.
----------	---------------

Ladeanschluss	USB-C
---------------	-------

Gewicht	106g
---------	------

Maße	101 mm x 144 mm x 40,1 mm
------	---------------------------

Kabellänge	80cm
------------	------

Konformitätserklärung

Hiermit erklärt die Stage10 GmbH, dass das in dieser Bedienungsanleitung beschriebene Produkt allen relevanten Richtlinien der EU entspricht (2014/53/EU et al).

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<https://support.lioncast.com/hc/de/articles/360016208020>

Herstellerinformationen und Service

Wenn du Rückfragen zu dem Produkt hast oder falls Probleme bei der Bedienung auftreten o. Ä., wende dich zunächst per E-Mail an folgende Stelle:

info@lioncast.com

Lioncast is a trademark of Stage10 GmbH |
Torstr. 49 | 10119 Berlin | Germany

Entsorgung

Verpackung entsorgen



Entsorge die Verpackung sortenrein:

- Pappe und Karton zum Altpapier
- Folien in die Wertstoffsammlung

Gerät entsorgen

(Anwendbar in der Europäischen Union und anderen europäischen Staaten mit Systemen zur getrennten Sammlung von Wertstoffen)



Altgeräte dürfen nicht in den Hausmüll! Sollte dein Adapter einmal nicht mehr benutzt werden können, so ist jeder Verbraucher **gesetzlich verpflichtet**,

Altgeräte getrennt vom Hausmüll, z. B. bei einer Sammelstelle seiner Gemeinde/seines Stadtteils, abzugeben. Damit wird gewährleistet, dass Altgeräte fachgerecht verwertet und negative Auswirkungen auf die Umwelt vermieden werden. Deswegen sind Elektrogeräte mit dem hier abgebildeten Symbol gekennzeichnet.



Charging Grip

for Nintendo Switch Joy-Cons

Gesundheits- und Sicherheitsinformationen

Please read and observe the following health and safety information carefully before using the device. Failure to do so may result in damage or injury. Use of the product by children only under adult supervision.

Warnung

Hinweise zur elektrischen Sicherheit

- Use only for its intended purpose.
- Use the charging grip in dry conditions only.
- The charging grip must not be exposed to microwaves, high temperatures or prolonged and direct sunlight.
- Make sure that the charging grip does not come into contact with liquids or get wet!
- Never touch the charging grip with wet or greasy hands.
- Do not use the charging grip with excessive force or damage the USB Type-C connection
- Avoid touching the USB Type-C port with your fingers, metal objects or other surfaces. This will prevent contamination of the ports. Cleaning with a dry cloth is advantageous.
- If you notice any unusual noises, smells or smoke, or if liquid escapes, stop using the Controller and contact our service department.
- If you come into contact with the liquid, wipe it off directly with water. Clean the surface of the controller with a cloth.

- The charging grip must not be disassembled or repaired. If the controller is damaged, stop using it immediately and contact our service department. Do not touch damaged areas.
- Only use the enclosed USB-C cable in combination with the charging grip. Do not pull on the USB-C charging cable and do not bend it too much.
- Do not use the charging grip during a thunderstorm.

Caution

General Information

Keep this product and its packaging materials out of the reach of younger children. Packaging materials and the individual devices could be swallowed.

Cautious Use

If the controller is dirty, wipe it with a dry, soft cloth. Do not use thinner, petrol or alcohol.

Function illustration




- 1 USB Type-C charging port
- 2 Charging indicator
- 3 Player indicators
- 4 Joy-Con connection rails

Charging the Joy-Cons on the Lioncast Charging Grip

After connecting the Joy-Cons to the Charging Grip, one of the two options listed can be selected to charge the Joy-Cons.

- **Option 1:** Connect the supplied USB Type-A cable as shown in the illustration.
- **Option 2:** Connect the supplied USB Type-A cable directly to a USB power supply unit or a power bank.

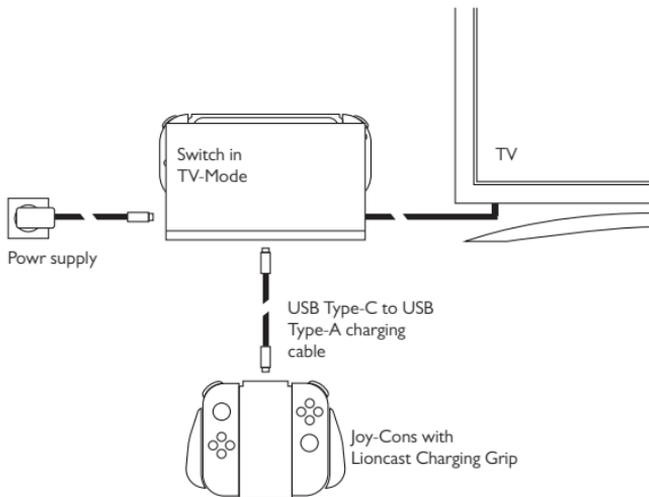

Technical Details

Input	5V / 450mA
-------	------------

Output	5V / 200mA or 5V / 400mA (2 Joy-Cons)
--------	--

Charging time	80 - 120 min.
---------------	---------------

Charging port	USB Type-C
---------------	------------

Weight	106g
--------	------

Dimensions	101 mm x 144 mm x 40,1 mm
------------	---------------------------

Cable length	80cm
--------------	------

Declaration of Conformity

Stage10 GmbH hereby declares that the product is in conformity with the relevant Union harmonization legislation(s) (2014/53/EU et al).

The full text of the EU declaration of conformity is available at the following Internet address:

<https://support.lioncast.com/hc/de/articles/360016208020>

Manufacturer Information and Service

If you have questions regarding the product or if any problems occur during operation or similar, first contact the following body via e-mail:

info@lioncast.com

Lioncast is a trademark of Stage10 GmbH |
Torstr. 49 | 10119 Berlin | Germany

Disposal

Disposing of the packaging



Dispose of the packaging sorted into single-type materials:

- Paperboard and cardboard for recycled paper
- Films in the recyclable material collection service

Disposing of the device

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



If the product is no longer operational, every consumer is **required by law to dispose of used devices separately from household waste**, e.g. at a collection point run by the communal authority/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical equipment is marked with the symbol shown here.

Lioncast Charging Grip for/für
Nintendo Switch Joy-Cons
Item no: 15947

Lioncast® is a registered trademark of
Stage10 GmbH
Torstr. 49
10119 Berlin
Germany

Nintendo Switch and Joy-Con are
registered trademarks of
Nintendo Co., Ltd.



Made in China

